

# FLASH POINT

## COIN/CREDIT OPTION SWITCH SETTING

DIP SW #2

OPTION		8	7	6	5	4	3	2	1
1 COIN	1 CREDIT	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF
1 COIN	2 CREDITS	ON	OFF	OFF	OFF	ON	OFF	OFF	OFF
1 COIN	3 CREDITS	OFF	ON	OFF	OFF	OFF	ON	OFF	OFF
1 COIN	4 CREDITS	ON	ON	OFF	OFF	ON	ON	OFF	OFF
1 COIN	5 CREDITS	OFF	OFF	ON	OFF	OFF	OFF	ON	OFF
1 COIN	6 CREDITS	ON	OFF	ON	OFF	ON	OFF	ON	OFF
2 COINS	1 CREDIT	OFF	ON	ON	OFF	OFF	ON	ON	OFF
3 COINS	1 CREDIT	ON	ON	ON	OFF	ON	ON	ON	OFF
4 COINS	1 CREDIT	OFF	OFF	OFF	ON	OFF	OFF	OFF	ON
2 COINS	3 CREDITS	ON	OFF	OFF	ON	ON	OFF	OFF	ON
2 COINS	1 CREDIT								
4 COINS	2 CREDITS	OFF	ON	OFF	ON	OFF	ON	OFF	ON
5 COINS	3 CREDITS								
6 COINS	4 CREDITS								
7 COINS	1 CREDIT	ON	ON	OFF	ON	ON	ON	OFF	ON
4 COINS	3 CREDITS								
1 COIN	1 CREDIT								
2 COINS	2 CREDITS								
3 COINS	3 CREDITS	OFF	OFF	ON	ON	OFF	OFF	ON	ON
4 COINS	4 CREDITS								
5 COINS	6 CREDITS								
1 COIN	1 CREDIT								
2 COINS	2 CREDITS	ON	OFF	ON	ON	ON	OFF	ON	ON
3 COINS	3 CREDITS								
4 COINS	5 CREDITS								
1 COIN	1 CREDIT	OFF	ON	ON	ON	OFF	ON	ON	ON
7 COINS	3 CREDITS								
FREE PLAY		ON	ON	ON	ON	ON	ON	ON	ON
		COIN SW #1		COIN SW #2					

## OPTION SWITCH SETTING

DIP SW #1

OPTION		8	7	6	5	4	3	2	1
NOT USED		OFF							
ADVERTISE	OFF		OFF						
SOUND	ON		ON						
NOT USED				OFF					
NOT USED					OFF				
GAME DIFFICULTY *1	NORMAL					OFF	OFF		
	EASY					ON	OFF		
	HARD					OFF	ON		
	HARDEST					ON	ON		
NOT USED								OFF	
2 cell MOVE	ON								OFF
MODE *2	OFF								ON

\*1 (GAME DIFFICULTY):

(Depends on the blocks' falling down speed.)

\*2 (2 cell MOVE MODE):

(When a player has been playing for more than 25 minutes with one coin, blocks will fall down two times faster (2 cell speed) than the ordinary speed.)

## PIN ASSIGNMENT

COLDER SIDE	PIN #	PARTS SIDE
GND	A 1	GND
GND	B 2	GND
+5V	C 3	+5V
+5V	D 4	+5V
	E 5	
+12V	F 6	+12V
MISTAKEN INPUT PREVENTION	H 7	MISTAKEN INPUT PREVENTION
COIN COUNTER 2 (GND)	J 8	COIN COUNTER 1 (GND)
SPEAKER (-)	L 10	SPEAKER (+)
AUDIO (GND)	M 11	AUDIO (+)
VIDEO GREEN	N 12	VIDEO RED
VIDEO SYNC	P 13	VIDEO BLUE
SERVICE SWITCH	R 14	VIDEO GND
	S 15	
COIN SWITCH 2	T 16	COIN SWITCH 1
START SWITCH 2	U 17	START SWITCH 1
2P CONTROL 1 UP	V 18	1P CONTROL 1 UP
2P CONTROL 2 DOWN	W 19	1P CONTROL 2 DOWN
2P CONTROL 3 LEFT	X 20	1P CONTROL 3 LEFT
2P CONTROL 4 RIGHT	Y 21	1P CONTROL 4 RIGHT
2P CONTROL 5 PUSH 1	Z 22	1P CONTROL 5 PUSH 1
2P CONTROL 6 PUSH 2	a 23	1P CONTROL 6 PUSH 2
2P CONTROL 7 PUSH 3	b 24	1P CONTROL 7 PUSH 3
2P CONTROL 8 SPARE 1	c 25	1P CONTROL 8 SPARE 1
2P CONTROL 9 SPARE 2	d 26	1P CONTROL 9 SPARE 2
GND	e 27	GND
GND	f 28	GND

## JOYSTICK CONTROL DIRECTIONS

